


# iSMA-B-LP



version 1.0


SPECIFICATION	
Supply	24 V AC/DC $\pm$ 20%
Temperature sensor	10k NTC type, Accuracy: $\pm$ 0,5°C
Humidity sensor	Range: 0 – 100% RH, Accuracy: $\pm$ 2% RH in range 20 – 80% RH
CO2 sensor	NDIR Range: 400 – 2000 ppm, Accuracy: $\pm$ 30 ppm, Warm Up Time : < 2 minutes (operational); 10 minutes (maximum accuracy)
Processor	ARM Cortex M0+
Interface	RS485, Mini USB type B
Ingress Protection	IP20 - for indoor installation
Temperature	Operating: 0°C to +50°C; Storage: -40°C to +85°C
Relative Humidity	5 to 95% RH (without condensation)
Connectors	2x RJ12 Terminal
Dimensions	100 x 123 x 27 mm
Mounting	Standard 60mm wall back box
Housing material	Plastic, self-extinguishing PC/ABS

## INSIDE AND REAR VIEW

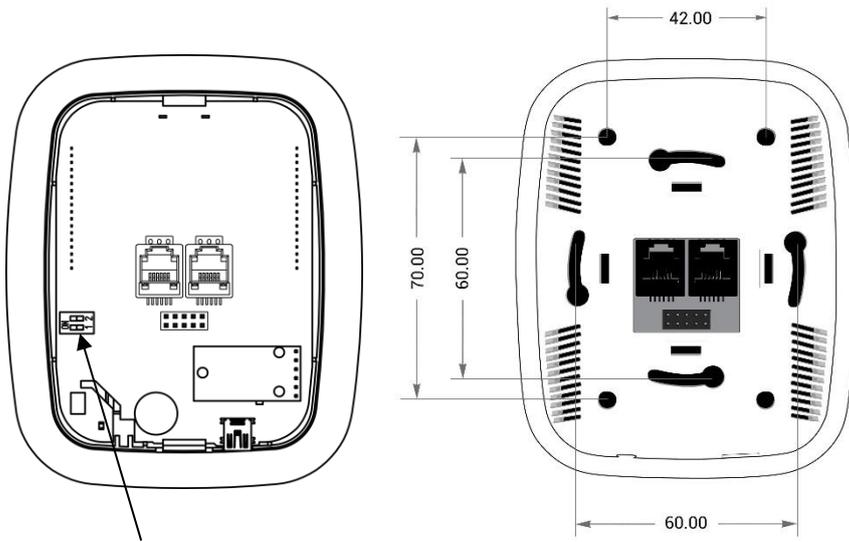


Switch	Description
1	Restore default settings
2	Network Termination


## MOUNTING VIEW

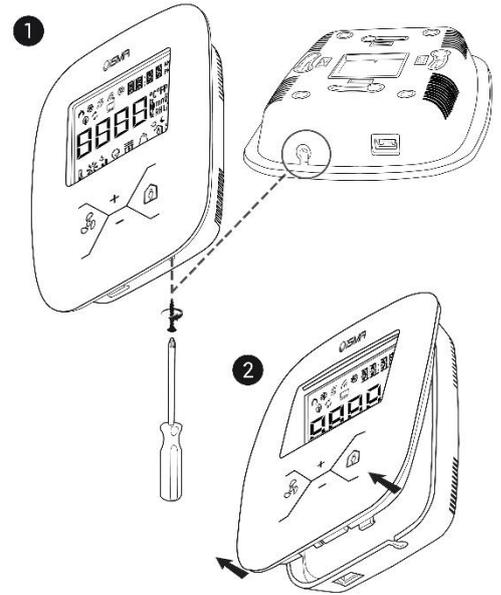

## RJ12 PIN DESCRIPTION

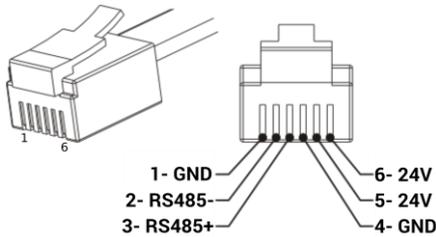


## COMMUNICATION

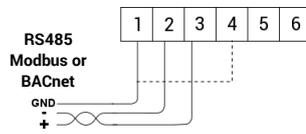


## POWER SUPPLY

### DC Voltage

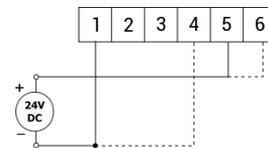

### AC Voltage

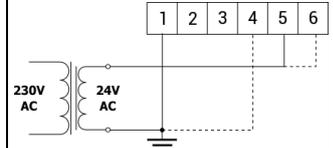

## ⚠ WARNING ⚠

- Note, an incorrect wiring of this product can damage it and lead to other hazards. Make sure the product has been correctly wired before turning the power ON.
- Before wiring, or removing/mounting the product, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the product. Doing so might cause electric shock or faulty operation.
- Use the product within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere etc.). Failure to do so might cause fire or faulty operation.
- Firmly tighten the wires to the terminal. Insufficient tightening of the wires to the terminal might cause fire.