





iSMA-B-MAC36NL

iSMA-B-MAC36NL-RS

iSMA-B-MAC36NL-M



SPECIFICATION			
Power Supply	DC: 24 V ± 20%, 14 W; AC: 24 V ± 20%, 24 VA		
Universal Inputs	16x voltage, current, resistance, temperature measurement, dry contact inputs		
Digital Inputs	4x dry contact inputs, high-speed pulse counter up to 100 Hz		
Digital outputs	8x relay output	Maximum ratings	UL compliant ratings
	Resistive load max.	3 A @ 230 V AC 3 A @ 30 V DC	3 A @ 24 V AC 3 A @ 30 V DC
	Inductive load max.	75 VA @ 230 V AC 30 W @ 30 V DC	8 VA @ 24 V AC 30 W @ 30 V DC
Analog Outputs	8x 0-10 V DC outputs, maximum load up to 20 mA		
Processor	Multicore Cortex-A Series ARM Processor		
Interfaces	Standard	2x 10/100 Ethernet, 1x RS485 (half duplex, optoisolated), 2x USB (1x Host, 1x OTG), HDMI	
	Extensions	Additional RS485 (half duplex, optoisolated), or M-Bus (optoisolated, built-in power supply for 20 devices max.)	
Ingress Protection	IP20 - for indoor installation		
Temperature	Operating: 0°C to 50°C (32°F to 122°F) *See "Placement Recommendations" for more information; Storage -40°C to 85°C (-40°F to 185°F)		
Relative Humidity	5 to 95% RH (without condensation)		
Connectors	Removable screw terminals, separable 0.5 ... 2.5 mm ² (18 ... 12 AWG)		
Dimensions	160 x 111 x 62 mm (6,3" x 4,4" x 2,45")		
Mounting	DIN rail mounting (DIN EN 50022 norm)		
Housing material	Plastic, self-extinguishing PC/ABS		

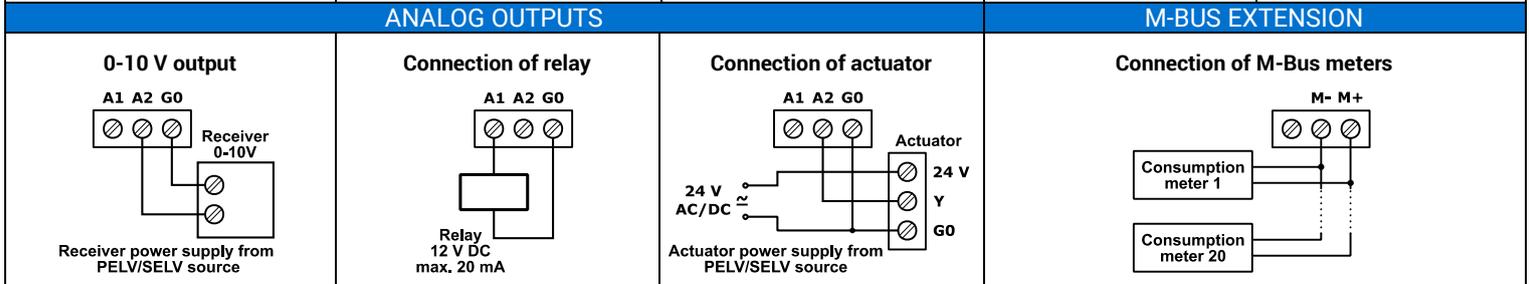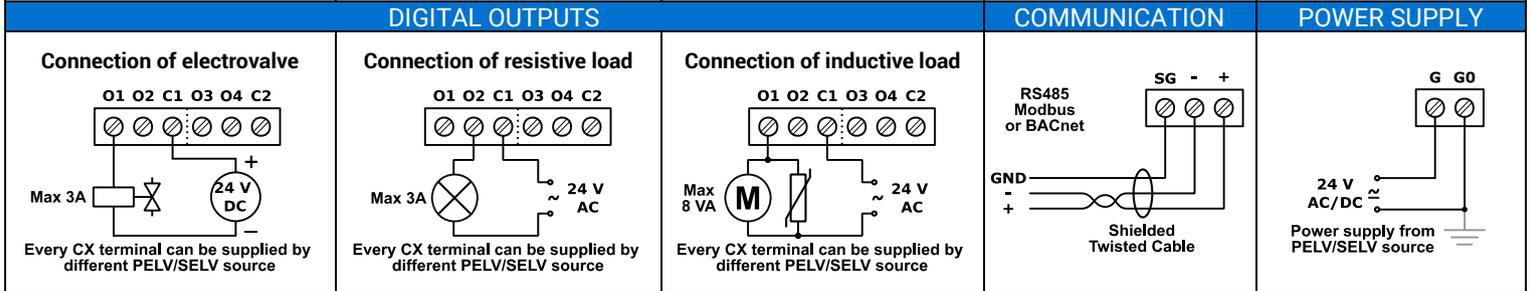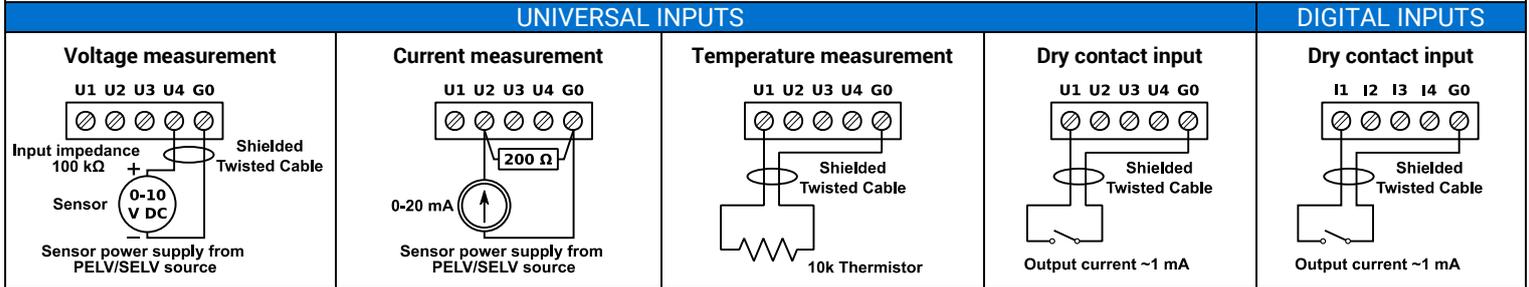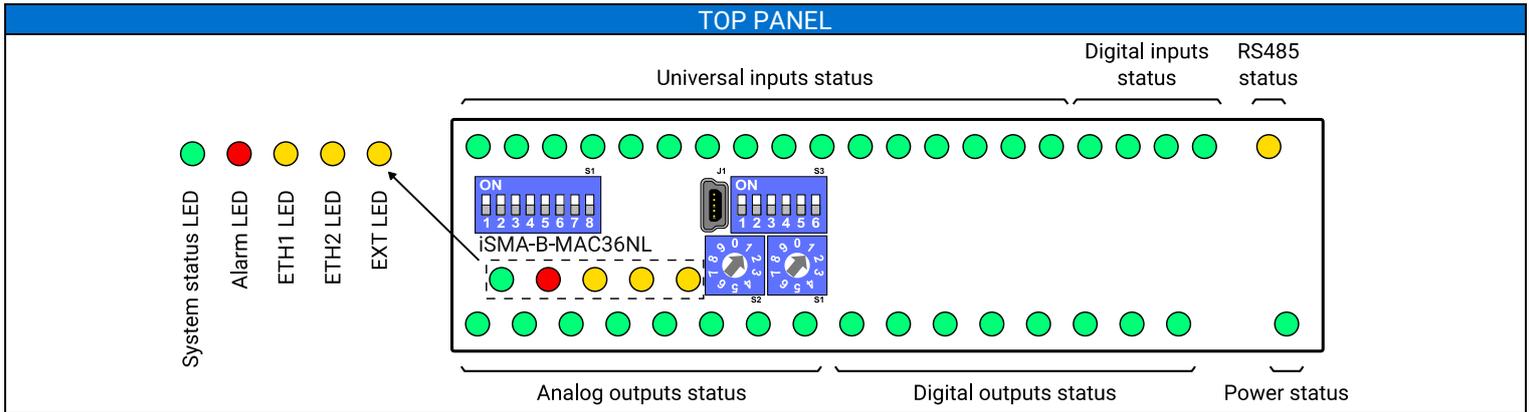


COMPLEMENTARY NOTES

<ul style="list-style-type: none"> Purpose of control: Operating control Construction of control: Independently mounted Type of action: 1.C 	<ul style="list-style-type: none"> Pollution degree: 2 Impulse voltage: 500 V
--	---

⚠ WARNING ⚠

- Note, an incorrect wiring of this product can damage it and lead to other hazards. Make sure the product has been correctly wired before turning the power ON.
- Before wiring, or removing/mounting the product, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the product. Doing so might cause electric shock or faulty operation.
- Use the product within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere etc.). Failure to do so might cause fire or faulty operation.
- Firmly tighten the wires to the terminal. Insufficient tightening of the wires to the terminal might cause fire.

BLOCK DIAGRAM

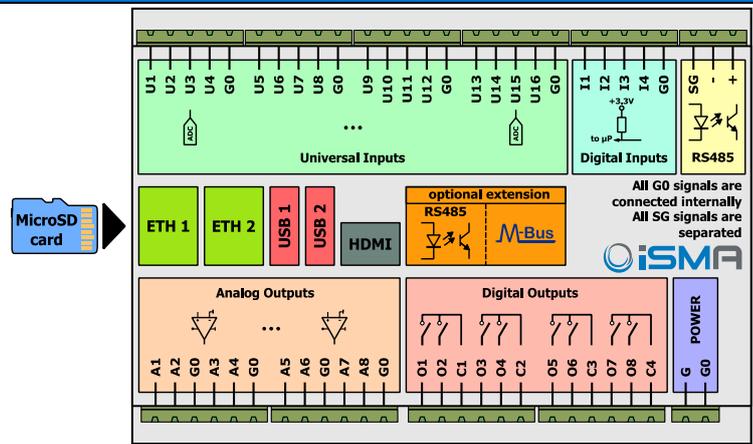


WIRING

- Line power cables must be routed with spatial separation from signal and data transmission cables.
- Analog and digital signal cables should also be separated.
- It is recommended to use shielded cables for analog signals, cable shields should not be interrupted by intermediate terminals.
- The shielding should be earthed directly after the cable enters the cabinet.
- It is recommended to install interference suppressors when switching inductive loads (e.g. coils of contactors, relays, solenoid valves). RC snubbers or varistors are suitable for AC voltage and freewheeling diodes for DC voltage loads. The suppressing elements must be connected as close to the coil as possible.

PLACEMENT RECOMMENDATIONS

For appropriate ventilation MAC36NL must be placed horizontally inside the cabinet. Avoid placing any objects 40 mm below and above the controller to ensure unobstructed airflow. While operating in near maximum allowed ambient temperature/humidity it is recommended to enforce ventilation inside the cabinet.

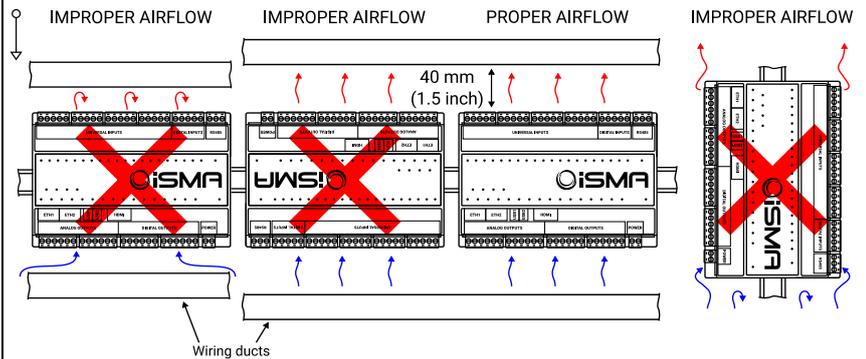

RS485 CONFIGURATION

In the iSMA-B-MAC36NL device there is a built-in 3 position switch which is dedicated to connect 120 Ω termination resistor and/or biasing resistors. It can be accessed by removing the bottom part of enclosure. If using RS485 extension, the additional switch is located just below the extension's terminal.

Switch position	Biasing	Termination 120 Ω
1 (END)	ON	ON
2 (BIA)	ON	OFF
3 (NONE) - default	OFF	OFF

RS485 Extension

| END | BIA | NONE |

Bottom view of the board

UL 60730-1 POWER SUPPLY CONSIDERATIONS

- Electrical safety in the building automation and control systems is essentially based on the use of extra low voltage which is strictly separated from the mains voltage. This low voltage is either SELV or PELV according to UL 60730-1.
 - Protection against electric shock is ensured by the following measures:
 - limitation of voltage (low voltage AC/DC 24 V supply, either SELV or PELV)
 - protective-separation of the SELV-system from all circuits other than SELV and PELV
 - simple-separation of the SELV-system from other SELV-systems, from PELV-systems and earth
 - Field devices such as sensors, status contacts and actuators connected to the low-voltage inputs and outputs of I/O modules must comply with the requirements for SELV or PELV. The interfaces of field devices and other systems must also satisfy SELV or PELV requirements.
- When the supply of SELV or PELV circuits is obtained from supply mains of higher voltages it shall be provided by safety transformer or a converter designed for continuous operation to supply SELV or PELV circuits.

FCC COMPLIANCE NOTE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SOFTWARE LICENSE NOTICE

This product contains code covered by the GNU General Public License (GPL).